

---

## **RBA LGE28 User Manual**

### **General Description and Name**

This scheme is LGE special format. It uses BRA method for bad blocks handling. And It have BBM info area(bad block table).

### **Relevant User Options**

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "RBA LGE28"

Spare area : "Enabled"

Other options set default value.

### **Special Notes**

Update bad block table in first one good block and then make ECC.

### **Revision History**

V1.0 2012. 05. 29

### **Appendix**

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>